





# Installation/Care/Use Manual


## EZH20 In Wall Bottle Filling Station

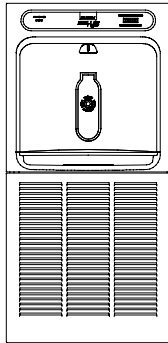


LZWSM8\*

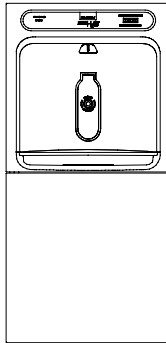

LZWSMD\*

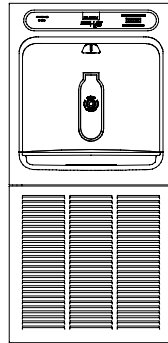

LZWSM8P\*

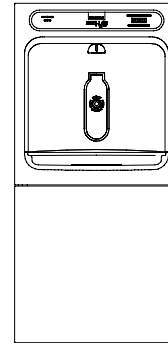

LZWSMDP\*

### Installer



To assure you install this model easily and correctly, PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL AND OTHER APPLICABLE CODES. After installation, leave these instructions inside the fountain for future reference.

### IMPORTANT

ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON

### IMPORTANT! INSTALLER PLEASE NOTE.

THE GROUNDING OF ELECTRICAL EQUIPMENT SUCH AS TELEPHONE, COMPUTERS, ETC. TO WATER LINES IS A COMMON PROCEDURE. THIS GROUNDING MAY BE IN THE BUILDING OR MAY OCCUR AWAY FROM THE BUILDING. THIS GROUNDING CAN CAUSE ELECTRICAL FEEDBACK INTO A FOUNTAIN, CREATING AN ELECTROLYSIS WHICH CAUSES A METALLIC TASTE OR AN INCREASE IN THE METAL CONTENT OF THE WATER. THIS CONDITION IS AVOIDABLE BY USING THE PROPER MATERIALS AS INDICATED. ANY DRAIN FITTINGS PROVIDED BY THE INSTALLER SHOULD BE MADE OF PLASTIC TO ELECTRICALLY ISOLATE THE FOUNTAIN FROM THE BUILDING PLUMBING SYSTEM. WE SUGGEST THAT THE BOTTLE FILLER BE PROTECTED BY A GROUND FAULT CIRCUIT INTERRUPTER (GFCI)

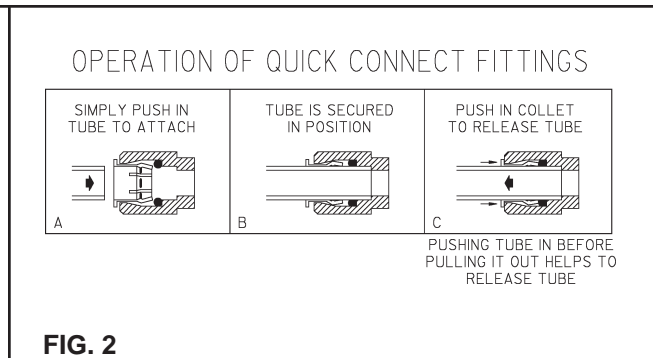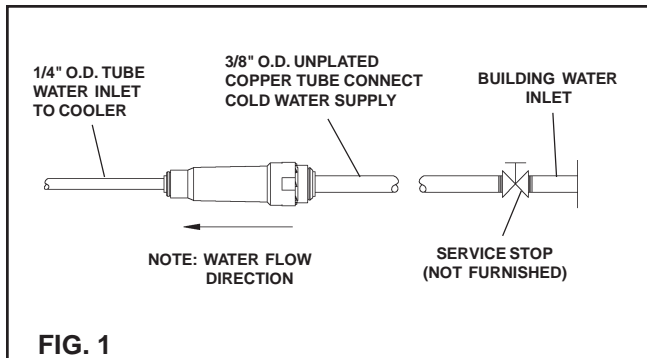

LZWSM8P\*, LZWSMDP\* ROUGH-IN

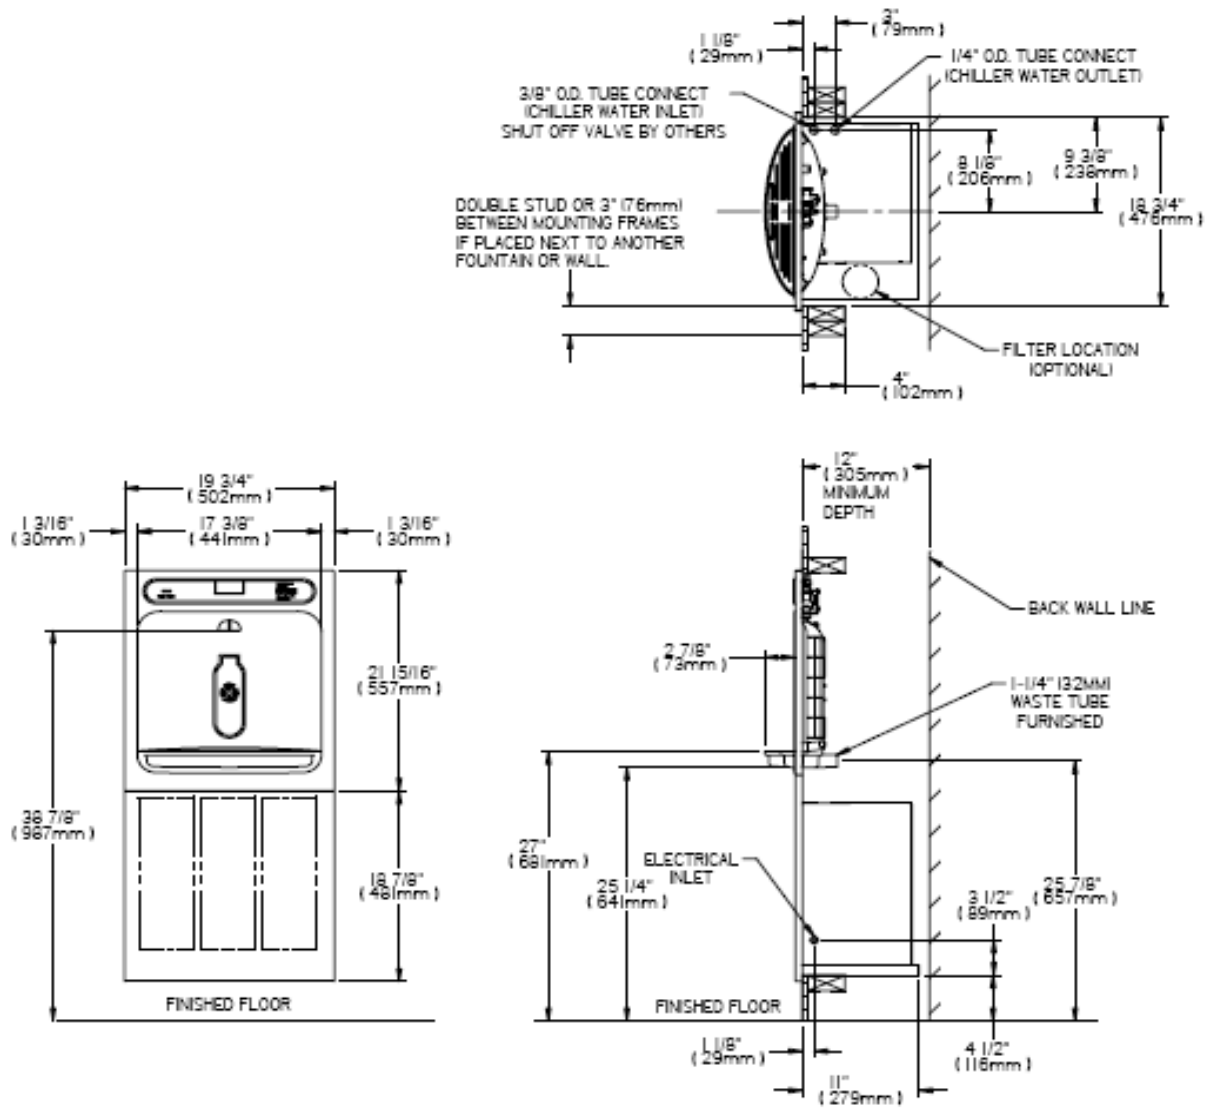


FIG. 3

LZWSM8\*, LZWSMD\*, LZWSM8P\*, LZWSMDP\*  
 LZWSM8\*, LZWSMD\* ROUGH-IN

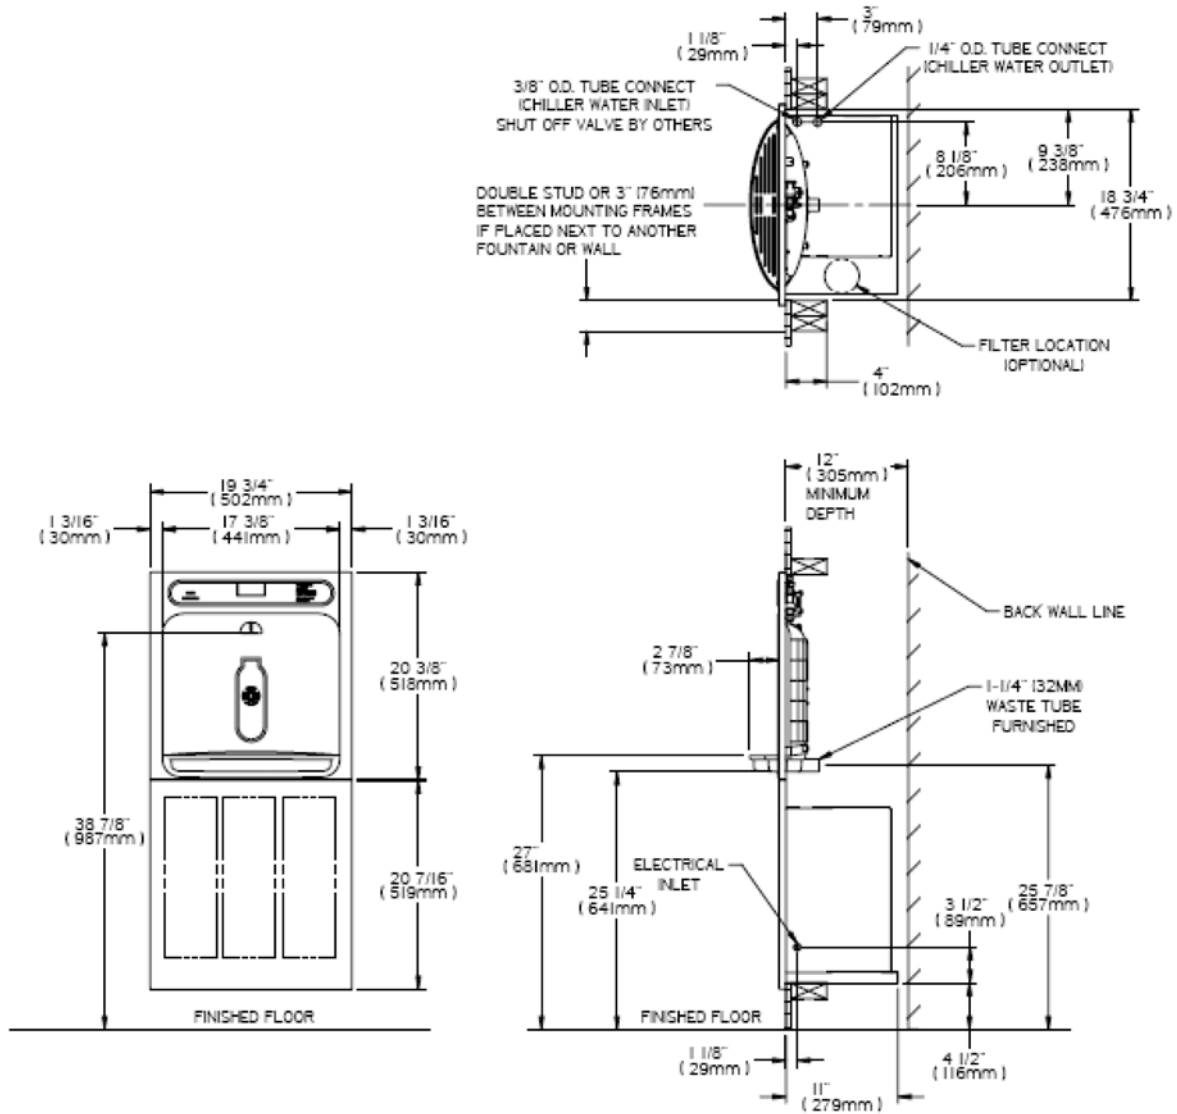


FIG. 4

## INSTALLATION INSTRUCTIONS

1. Install mounting frame. See mounting frame instructions.
2. Install remote chiller. See chiller instructions.
3. **EWF3000 WATERSENTRY PLUS FILTER INSTALLATION**

**NOTICE: Do not use with water that is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system.**


1) These filter kits must be installed in compliance with all state and local laws and regulations governing the installation and use of this product. Maximum inlet water temperature 100°F (38°C).

2) See filter instructions for filter assembly. Insert 3/8" elbow fitting into the inlet side of filter head, insert 1/4" polytube or 1/4" x 90° elbow into outlet of filter head prior to mounting the filter head assembly into the remote chiller

3) Mount filter head to the side of the remote chiller using the filter mounting bracket and screws supplied.

**CAUTION: If supply pressure will ever exceed 100 psi, install a pressure regulator to limit the inlet pressure to the filter to 100 psi or below.**


**DO NOT ATTACH HOT WATER LINE TO FILTER.** To make connections on the filter head, loosen locknut. Push the tube end past both o-rings to a positive stop in the filter head recess - approx. 1", locknut may have to be backed out a little more. Screw the locknut hand tight to seal (See Fig. 5). Ends of tubing must be cut square and free of burrs and sharp ends that could cut or nick the o-rings.

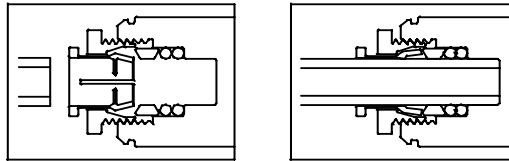

**NOTE: SCREW THE LOCKNUT  
HAND TIGHT TO SEAL  
FIG. 5**

4. Make water supply connections. Install a shut-off valve and union connection to building water supply (valve and union not provided). Turn on the water supply and flush the line thoroughly.
5. Make connection between filter head and building supply line. Insert the 3/8" water line into the inlet side of the filter head by pushing it in until it reaches a positive stop, approximately 3/4" (19mm). Install two 1/4" x 1/4" unions (provided) on the chiller. One on the inlet tube, and the other on the outlet tube
6. Make connection between the filter head and the remote chiller. Insert end of 1/4" O.D. poly tubing from the filter head (provided) into union on chiller inlet
7. Mount the upper panel to the mounting frame, aligning holes in the hinge brackets with holes in the mounting frame (three places). Mount with adequate size screws (Not provided) Close the door and verify that the lock brackets on the side and bottom of the panel align with the slots on the mounting frame. Also verify that the panel is hanging high enough that it covers the top of the mounting frame. If adjustments need to be made, open the door and loosen the three screws on the hinge and adjust accordingly and then retighten the screws.
8. Connect water line from the water station by inserting the 1/4" O.D. poly tubing into the union on the chiller outlet.
9. Close the upper door and attach the drain fittings to drain tube. Re-attach elbow to p-trap and cut waste tube to required length using plumbing hardware and trap as a guide.

## PLUMBING DIAGRAM FIG. 6

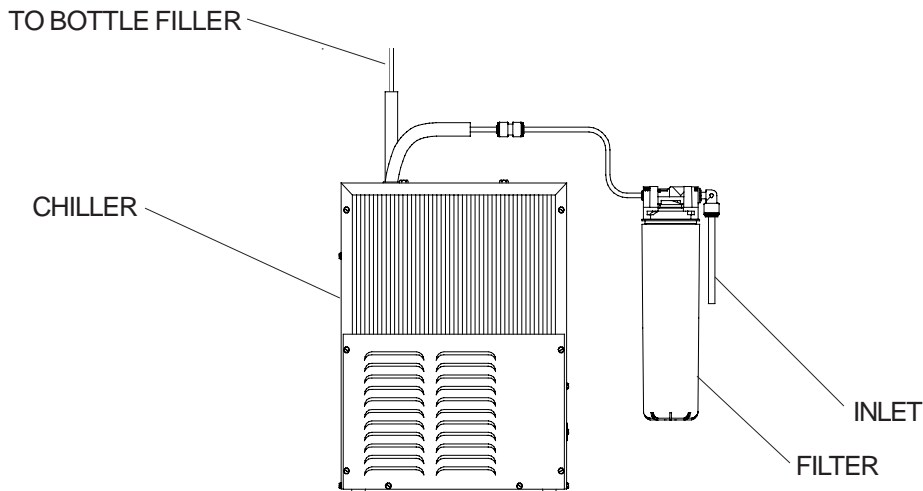

10. Lock the door in place using two set screws (provided) on the side of the panel, and a ¼ x 20 bolt thru the front of the panel into the nut in the frame.
11. Install filter cartridge, remove filter from carton, remove protective cap, attach filter to filter head by firmly inserting into head and rotating filter clockwise.
12. Turn water supply on and inspect for leaks. Fix all leaks before continuing.
13. Once unit has been inspected for leaks, and any leaks found corrected, plug Bottle Filler into wall. Be sure to reinstall fuse to the circuit or switch the circuit breaker back to the "ON" position.
14. Once power is applied to Bottle Filler, the GREEN LED light should illuminate showing good filter status along with the LCD Bottle Counter.
15. Verify proper dispensing by placing cup, hand, or any opaque object in front of sensor area and verify water dispenses. Note: the first initial dispenses might have air in line which may cause a sputter. This will be eliminated once all air is purged from the line. A steady stream of water assures all air is removed. The sensor has a 30 second maximum **ON** time. It may be necessary to step away from beam a few times to allow chiller tank to refill. Check for leaks.
16. Mount the lower panel to the mounting frame, aligning holes in the hinge brackets with holes in the mounting frame (three places). Mount with adequate size screws (Not provided) Close the door and verify that the lock brackets on the side of the panel align with the slots on the mounting frame. If adjustments need to be made, open the door and loosen the three screws on the hinge and adjust accordingly and then retighten the screws.
17. Lock the lower door in place using two set screws (provided) on the side of the panel.
18. **SETTING THE CONTROL BOARD – SETTING RANGE OF THE IR SENSOR**  
 In order to access the programming button, the lower door must be open. The button is located at the bottom of the upper panel  
 With your finger, depress the program button for approximately 2 seconds until the display changes then release. The display will change and scroll through three messages:  
 "RST FLTR" – Reset Filter Status LED  
 "RST BCNT" – Reset Bottle Count  
 "RNG SET" – Range Set for IR Sensor  
 If the program button is not pushed again the display will scroll through the three messages above for three cycles and then default back to bottle count and be back in run mode.  
 To set the RANGE of IR Sensor: when display shows "RNG SET" push program button once the display will show current value (can be 1 – 10) i.e. "RNG = 3".  
 Once display shows current value push the program button to scroll through value of 1 – 10. Select the desired range setting.  
 Once range is selected allow approximately 4 seconds to pass and then the display will go back to bottle counter and be in run mode.  
 Test bottle filler by placing bottle or hand in front of sensor to make sure water is dispensed.

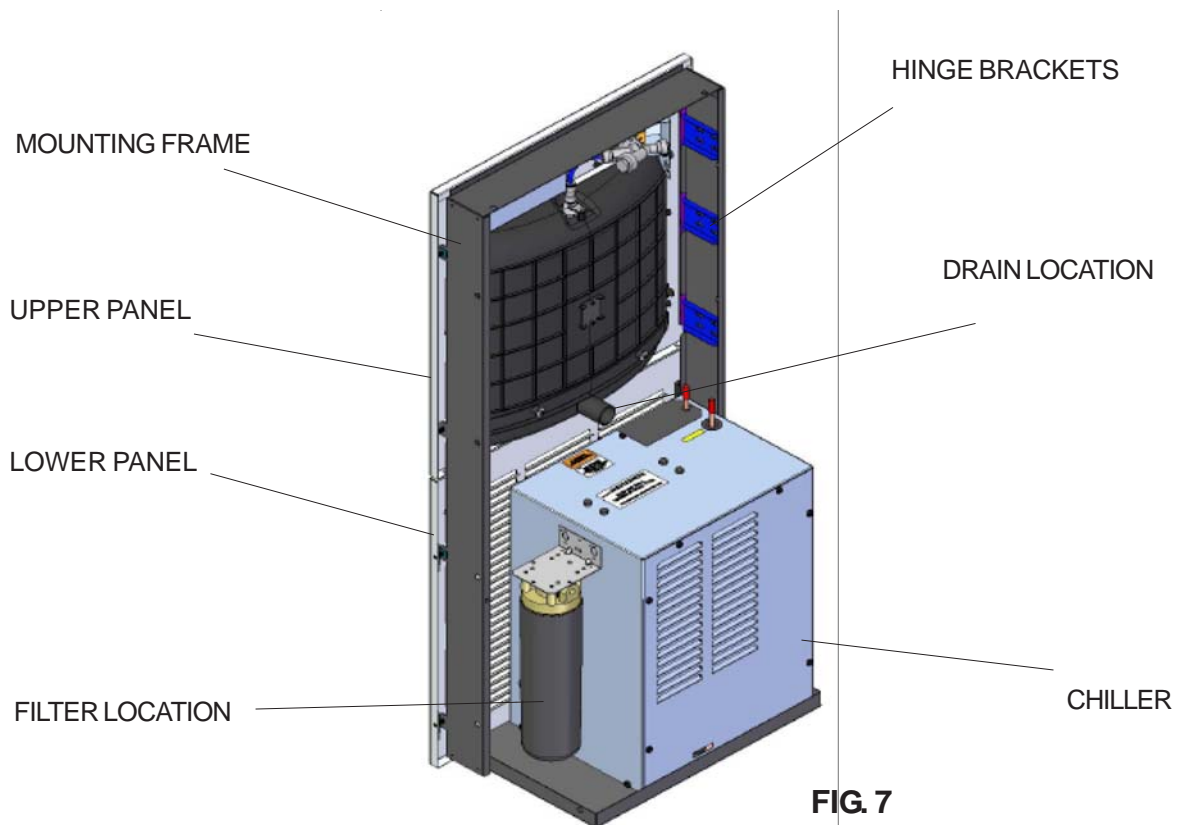


FIG. 7

**19. RESETTING FILTER**

In order to access the programming button, the lower door must be open. The button is located at the bottom of the upper panel

With your finger, depress the program button for approximately 2 seconds until the display changes then release.

The display will change and scroll through three messages:

“**RST FLTR**” – Reset Filter Status LED

“**RST BCNT**” – Reset Bottle Count

“**RNG SET**” – Range Set for IR Sensor

If the program button is not pushed again the display will scroll through the three messages above for three cycles and then default

back to bottle count and be back in run mode.

When the display changes to "RST FLTR", depress the button again. The display will change to show "FLT=".

Depress the button again and the display will show "FLTR=0". The green LED should now be illuminated indicating that the visual filter monitor has been reset.

**20. RESETTING BOTTLE COUNTER**

In order to access the programming button, the lower door must be open. The button is located at the bottom of the upper panel

With your finger, depress the program button for approximately 2 seconds until the display changes then release.

The display will change and scroll through three messages:

“**RST FLTR**” – Reset Filter Status LED

“**RST BCNT**” – Reset Bottle Count

“**RNG SET**” – Range Set for IR Sensor


If the program button is not pushed again the display will scroll through the three messages above for three cycles and then default

back to bottle count and be back in run mode.


When the display changes to "RST BCNT", depress the button again. The display will change to show current bottle count value i.e. "BC0033183". Depress the button again and the display will change to "BTLCT=0" for approximately 2 seconds and then return to run mode displaying 000000. You can test the bottle counter by running water approximately 5 seconds to see bottle counter advance 1.

**LZWSM8\*, LZWSMD\*, LZWSM8P\*, LZWSMDP\***

| <b>WATERSENTRY® PLUS FILTER PARTS LIST</b><br>(See Fig. 8) |          |                                  | <b>LISTA DE PIEZAS DEL FILTRO</b><br>(Vea Fig. 8) | <b>LISTE DES PIÈCES DU FILTRE</b><br>(Voir Fig. 8) |
|------------------------------------------------------------|----------|----------------------------------|---------------------------------------------------|----------------------------------------------------|
| ITEM NO.                                                   | PART NO. | DESCRIPTION                      | DESCRIPCIÓN                                       | DESCRIPTION                                        |
| 1                                                          | 51294C   | Filter Head Assy.                | Ensamblado de la Cabeza del Filtro                | Ens. de tête de filtre                             |
| 2                                                          | 70792C   | Screw #8-18 x .75 PH             | Tornillo #8-18 x .75 PH                           | Vis #8-18 x .75 hp                                 |
| 3                                                          | 70823C   | Fitting - Superseal 3/8" (10 mm) | Accesorio - Superseal 3/8" (10mm)                 | Raccord - Superseal 3/8" (10mm)                    |
| 4                                                          | 70822C   | Fitting - Superseal 1/4" (6 mm)  | Accesorio - Superseal 1/4" (6 mm)                 | Raccord - Superseal 1/4" (6mm)                     |
| 5                                                          | 51300C   | Filter Assy                      | Ensamblado del Filtro                             | Ens. filtre                                        |
| 6                                                          | 70818C   | Elbow - 3/8" (10mm)              | Codo - 3/8" (10 mm)                               | Coude - 3/8" (10mm)                                |
| 7                                                          | 22490C   | Bracket                          | Fijador                                           | Support                                            |

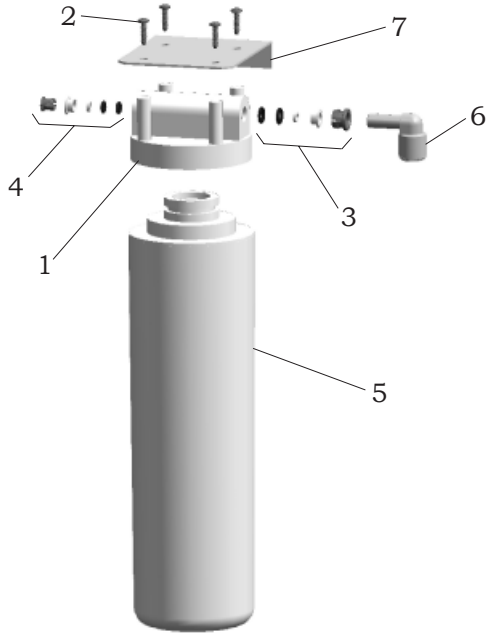

**WATER FILTER EXPLODED VIEW**  
**FIG. 8**

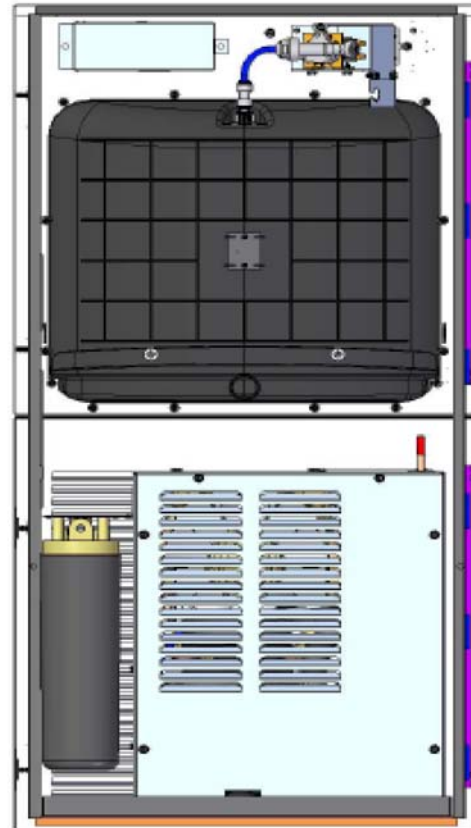

**FIG. 9**

| <b>REPLACEMENT PART KITS</b> |                                  |
|------------------------------|----------------------------------|
| PART NO.                     | DESCRIPTION                      |
| 98543C                       | Kit - Electrical Package         |
| 98544C                       | Kit - EE Sensor                  |
| 98545C                       | Kit - Solenoid Valve Replacement |
| 98546C                       | Kit - Aerator Replacement        |
| 98549C                       | Kit - Hardware & Waterway Parts  |

**REPAIR SERVICE INFORMATION TOLL FREE NUMBER 1.800.260.6640**  
 NUMERO GRATIS DE SERVICIO 1.800.260.6640  
 INFORMATIONS POUR LE SERVICE PAR NUMERO SANS FRAIS 1.800.260.6640

**PRINTED IN U.S.A.**  
 IMPRESO EN LOS E.E.U.U.  
 IMPRIME AUX E.-U.

**FOR PARTS, CONTACT YOUR LOCAL DISTRIBUTOR OR CALL 1.800.323.0620**  
 PARA PIEZAS, CONTACTE A SU DISTRIBUIDOR LOCAL O LLAME AL 1.800.323.0620  
 POUR OBTENIR DES PIÈCES, CONTACTEZ VOTRE DISTRIBUTEUR LOCAL OU COMPOSEZ LE 1.800.323.0620